



Every

Wearable muscles.

Make life lighter



MAXIMUM

-25.5kgf

100Nm

Image of Power Support

Image of Power Support

Innophys Co., Ltd. 3rd Fl., Morito Memorial Hall,  
Tokyo University of Science 4-2-2 Kagurazaka, Shinjuku-ku, Tokyo, Japan




# Every

Make life lighter.  
 From lightening the load on your back at work to helping with daily labor-intensive activities.  
 Light, simple, and powerful.  
 Muscle Suit Every is an assistive suit to help all people live healthy lifestyles.



## Features

powerful

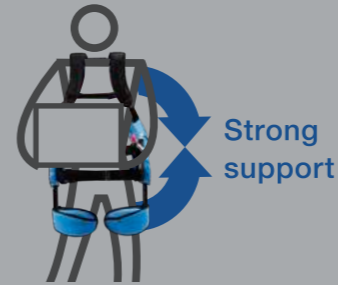

Strong support

Assists movements with up to 25.5 kgf of auxiliary force.

eco-friendly



Saves energy

No need for electricity!  
 It works with air pressure for an unlimited amount of time.

lightweight



Wearable

Product weight of 3.8 kg

simple



Easy to wear

Put it on in 10 seconds.  
 No expert skills are required.


good value



Reasonably priced

Made possible for families to purchase.


water & dust proof

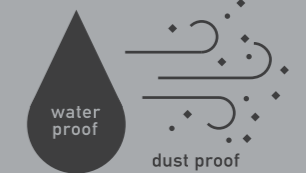

Protection

Jobs outdoors or with water are no problem.

Use it at home, at work, or in a variety of situations

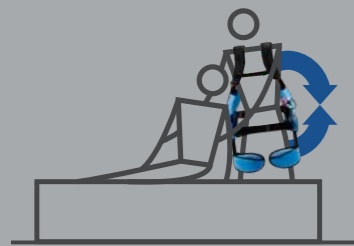


Nursing care support



Farming



Shoveling snow or other labor-intensive jobs

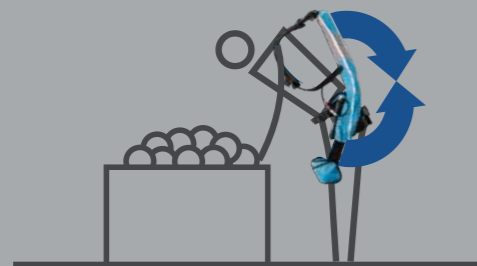

Maintaining uncomfortable positions



Carrying heavy loads

|  |  |
|--|--|
| Types  | Soft fit / Tight fit   |
| Sizes:based on height (recommended)                    | Small / Medium:150 -165 cm, Medium / Large:160 -185 cm   |
| Product weight   | 3.8 kg *Not including cover  |
| Driving force  | Compressed air   |
| Actuator   | McKibben artificial muscle   |
| Compressed air supply method                           | Manual air pump  |
| Assistive force  | 25.5kgf(100Nm)   |
| Operating temperature                                  | -30°C~50°C   |
| Dustproof / Waterproof performance (protection rating) | IP56   |
| Product dimensions:H x W x D                           | Small / Medium:805mm/465mm/170mm Medium / Large:840mm/465mm/170mm                                  |
| Manufacturer's warranty period                         | Six months /extended to one year if product registration is completed within one month of purchase |